



OZ Optics

shop.ozoptics.com
www.ozoptics.com

219 Westbrook Road
Ottawa, ON, Canada, K0A 1L0

Toll-free: 1-800-361-5415
Telephone: 1-613-831-0981
Fax: 1-613-836-5089
sales@ozoptics.com

MULTICHANNEL ELECTRICALLY CONTROLLED VARIABLE ATTENUATOR (RACK MOUNT)

Features

- High power handling (up to 2 watts)
- Wide attenuation range (up to 60 dB)
- Low PDL and wavelength dependency
- Low insertion loss and backreflection
- High resolution
- Rugged and compact design
- Calibrated for dual wavelengths, (1300–1550 nm) or calibrated for C and L bands. It can also be calibrated for up to four individual wavelengths
- Wide wavelength range (350–2050 nm)
- Wide range of receptacles
- Blocking technique for singlemode and polarization maintaining; neutral density filter technique for multimode fiber applications
- Computer interface (USB as standard)



Multichannel Variable Attenuator

Your choice of up to 32 attenuators per unit

- Choose between broad and narrow wavelength
- Optional integrated power monitoring for precise output power control

Applications

- Bit error rate testing
- Trouble shooting receivers and other active fiber optic components
- Simulating long distance fiber transmission
- Design of fiber optic transmitter/receiver circuitry
- Power meter linearity checks
- Power setting

Product description

OZ Optics offers a compact, rugged and low cost multichannel digital attenuator with high resolution, high attenuation range, and high power handling (blocking technique only). OZ Optics' multichannel digital attenuator is a 19" 3U Rack Module. These attenuators have low insertion loss, low backreflection, low PDL and flat wavelength response. These units can be calibrated for up to 4 wavelengths for each attenuator, for C or L bands. Alternatively the unit can be calibrated for a continuous range. By using interpolation between the calibration wavelengths, the unit is capable of providing accurate attenuation levels over a continuous, broad range of wavelengths.

OZ Optics' multichannel attenuators are ideal for use in bit error rate testing, troubleshooting receivers and other active fiber optic components, power meter linearity checks, simulating long distance fiber transmission, and power setting. A computer interface allows users to access or remotely control the unit through a PC.

OZ Optics provides attenuators that use either singlemode, multimode or Polarization Maintaining (PM) fiber. In general, OZ Optics uses polarization maintaining fibers based on the PANDA fiber structure when building polarization maintaining components and patch cords. However, OZ Optics can construct devices using other PM fiber structures. We do carry some alternative fiber types in stock, so please contact our sales department for availability. If necessary, we are willing to use customer supplied fibers to build devices.

The built-in power meter and power stabilization function lets you set and maintain the output power stability even when the input power fluctuates. You will get reliable and repeatable test results, each and every time.

Standard product specifications

| Fiber Type | | SM/PM | MM |
|---|---------|--|--------------|
| Available wavelengths | | 350–2050 nm | 350–2050 nm |
| Insertion loss ¹ (IL) | Typical | 1.0 dB | 2.0 dB |
| | Maximum | 2.0 dB | 4.0 dB |
| Attenuation range ² | | IL to 60 dB | IL to 40 dB |
| Attenuation resolution ³ | | 0.01 dB | |
| Wavelength dependence of attenuation ⁴ | | from 1300 nm to 1550 nm | up to 0.3 dB |
| | | from 1520 nm to 1570 nm | up to 0.1 dB |
| Polarization dependent loss ¹ | Typical | up to 0.05 dB | |
| | Minimum | up to 0.01 dB | |
| Return loss ¹ | | 40, 50 or 60 dB | 35 dB |
| Speed ⁵ | | 100 ms | |
| Repeatability of attenuation setting | | up to 10 dB | ±0.03 dB |
| | | up to 30 dB | ±0.10 dB |
| | | up to 40 dB | ±0.3 dB |
| Accuracy ⁶ | | up to 40 dB | ±0.3 dB |
| | | 40 to 55 dB | ±0.5 dB |
| | | 55 to 60 dB | ±1.0 dB |
| Power Supply | | Universal 110/220V AC 50/60 Hz, 500 W | |
| Maximum optical power | | up to 2 W ⁷ | up to 50 mW |
| Computer interface | | USB | |
| Polarization extinction ratio (for PM fiber) ¹ | | 20, 25 or 30 dB | |
| Dimensions ⁸ | | 19" 3U Rack Mount, 19" x 5.25" x 20" (48.26 x 13.33 x 50.8 cm) | |
| Weight | | 33 lb. + 0.55 lb./channel (15 kg + 0.25 kg/channel) | |
| Operating temperature | | 14°F to 131°F (-10°C to 55°C) | |
| Storage temperature | | -22°F to 158°F (-30°C to 70°C) | |

Notes: 1 Excluding connectors.

2 Up to 60 dB range also available for Multimode version upon request.

3 For attenuation up to 10 dB.

4 Measured at 23°C and at minimum attenuation (insertion loss).

5 A 3 dB attenuation change, when initially set at 10 dB attenuation. Actual performance will vary with initial attenuation.

6 Tested at 23°C.

7 For 1300/1550 or 2000 nm units. Higher power levels are available as custom parts.

8 Excluding receptacles.

Ordering examples for standard parts

A customer needs to control the attenuation by using a computer for 32 channels at 1550 nm. He needs LC/PC connectors and up to 10 mW power handling with 40 dB or better return loss. He should be ordering the following parts:

| Bar Code | Part Number | Description |
|----------|--------------------------------|--|
| 61657 | MCDD-100-32-LC-1550-9/125-S-40 | Digital attenuator with 32 channels for 1550 nm with 9/125 micron singlemode fiber and LC/ Super PC receptacles. |

OZ Optics welcomes the opportunity to provide custom designed products to meet your application needs. As with most manufacturers, customized products do take additional effort so please expect some differences in the pricing compared to our standard parts list. In particular, we will need additional time to prepare a comprehensive quotation, and lead times will be longer than normal. In most cases non-recurring engineering (NRE) charges, lot charges, and up to a 5 piece minimum order will be necessary. These points will be carefully explained in your quotation, so your decision will be as well-informed as possible. We strongly recommend buying our standard products.

Questionnaire for custom parts

1. How much power will be transmitted through the attenuator?
2. What type of fiber do you wish to use?
3. What is the worst acceptable return loss?
4. Will this attenuator be used in Europe or in the United Kingdom?
5. Are there any special performance requirements that you need to meet?
6. What wavelengths do you want the attenuator calibrated at?

Multichannel Variable Attenuator: **MCDD-100-CH-X-W-a/b-F-LB(-OPT)**

CH = Channel count (4 to 32).

X = Receptacle code
 3S = Super NTT-FC/PC
 3U = Ultra NTT-FC/PC
 3A = Angled NTT-FC/PC
 8 = AT & T-ST SC = SC
 SCA = Angled SC
 See the *Standard Tables* data sheet for other connectors.
https://www.ozoptics.com/ALLNEW_PDF/DTS0079.pdf


W = Wavelength: Specify in nanometers: Example: 1300/1550 for standard telecom wavelength range.

a/b = Fiber core/cladding sizes, in microns 9/125 for 1300/1550 nm SM fiber.
 See the *Standard Tables* data sheet for other standard fiber sizes.
https://www.ozoptics.com/ALLNEW_PDF/DTS0079.pdf

OPT = Options
 OPM=Optical Power Monitoring
 LL=Low Insertion Loss (see note)
 HP=High Power (see note)
 DD=Digital Display

LB = Backreflection level: 40, 50 or 60 dB for singlemode fibers, 35 dB for MM fibers

F = Fiber type:
 M=Multimode
 S=Singlemode
 P=Polarization Maintaining

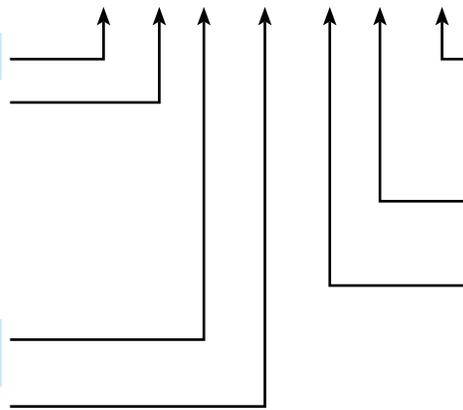

Ordering examples for custom parts

A customer wants to order a 32 channel MMCH attenuator to be calibrated at 1300 nm and 1550 nm, using singlemode fiber and FC/UPC receptacles with 50 dB backreflection and ≤ 1 dB insertion loss. The part number should be: MCDD-100-32-3U-1300/1550-9/125-S-50-LL.

Frequently asked questions (FAQs)

Q: What advantages or disadvantages does the beam blocking version have over the neutral density versions.

A: The beam blocking technique is naturally suited for high power applications, and can achieve greater attenuation levels. The neutral density version shows less mode dependence or modal noise in multimode applications.

Q: What do you mean by mode dependence and modal noise?

A: The term multimode means there is more than one path for light to travel inside a single fiber. These paths are known as modes. It does not mean the unit consists of multiple fibers in a bundle. When coherent laser light is coupled into multimode fiber, the output shows speckles. Bending the fiber causes the speckle pattern to change. If the losses in a system depend on which modes are excited, then changing the modes excited in the fiber changes the output power. This is known as modal noise. If the source being used is an LED, then one does not see speckles, and modal noise is not an issue. However, for laser sources, modal noise is an issue.

When blocking style attenuators are used with multimode fiber, some modes are blocked, while others are transmitted. This can produce 1 dB or greater modal noise fluctuations with coherent sources. A variable attenuator using a neutral density filter is not as strongly affected by modal noise. However, neutral density filter attenuators offer lower attenuation range (around 40 dB) and can only handle about 50 mW of power.

Q: I ordered an attenuator with 60 dB return loss but when I measured it my return losses are higher. Why?

A: If you ordered an attenuator with 60 dB return loss with connectors, the backreflection will depend on what grade of connector you selected for your fibers. Typically only angle polished (APC) style connectors will give the desired return losses. The device itself has 60 dB return loss (i.e. if you cut off the connectors and measured the return loss you will see it above 60 dB) but if you picked only an ultra PC finish, then you will see a higher level of backreflection.

Q: How many different wavelengths can be calibrated on a single unit? How will it affect accuracy? How will it affect costs?

A: One option is to have the unit calibrated at discrete wavelengths. Up to three wavelengths can be calibrated up to 60 dB. Optionally up to four wavelengths can be calibrated up to just 50 dB. Calibration sources are only available for certain wavelengths.

Note that over standard wavelength ranges such as from 1520 to 1620 nm, a unit will experience about 0.1 dB variation of attenuation versus wavelength.

Another option is to have a unit calibrated over a wavelength range. This process calibrates the unit at many more wavelengths, but at lower resolution, and then uses interpolation to produce a specific attenuation at a user defined wavelength. Either six or twelve wavelengths can be used for calibration, to reduce the variation to less than 0.03 dB over the range.

Q: How often should we send the unit for re-calibration?

A: We recommend yearly calibration.

Q: In case of power outage does the attenuator maintain its position?

A: If power is lost, the attenuator will maintain the attenuation level that was in effect at the time of the power outage. When power is restored, the attenuator will go to its reference HOME position. It will then go to the last position that it was instructed to go to before the power outage. During the time when the attenuator is seeking its HOME position, the level of attenuation may take on any value.

Q: Can I order a unit having different type of attenuators?

A: Yes you can. For example, you can have first 4 channel with SM, next 4 channel with MM, and last 4 channel PM fiber, and each can have a different wavelength. You can change the fiber type and wavelength for as many channel as you need (up to 32 channels).

Application notes

Sample Application: Signal Strength Monitoring and Control System

As illustrated in Figure 1 below, light from a transmission module is sent through a MCDD style attenuator before entering the transmission line. A 99:1 splitter is used to tap off a small monitor signal. This signal is measured with a photodiode module, which produces a digital representation of the light intensity. Based on this feedback, the computer adjusts the attenuator to set the output signal at the optimum intensity.

Wavelength calibration and accuracy

The digital variable attenuator is normally calibrated at the wavelength or wavelengths specified in the part number (Note: Parts with the wavelength specified as 1300 are in fact calibrated at 1310 nm). Standard models of the digital attenuator allow one to select between one or two calibration wavelengths. For DWDM applications, one normally orders the device calibrated for 1550 nm. Variation in the attenuation with wavelength over the C and L bands is minimal (<0.1 dB over the C and L bands for up to 30 dB attenuation).

For some applications however, people want digital attenuators that are calibrated for all wavelengths within a certain range. This can be accomplished as well. To achieve this the unit is calibrated at up to 12 different wavelengths, evenly spaced over the range in question. Two wavelengths are calibrated to 0.01 dB resolution, while the other wavelengths are calibrated to 0.1 dB resolution. The unit will use interpolation to determine the proper setting to obtain a specific attenuation at a specific wavelength. With this technique the attenuation precision is improved to better than 0.03 dB over the entire wavelength range for up to 30 dB attenuation.

OZ Optics utilizes a number of highly stable sources for calibrating digital variable attenuators for different wavelengths. These include single wavelength sources for 830, 1064, 1310, 1480, 1550, and 1625 nm, as well as tunable sources for the C and L bands (1520–1620 nm).

Please bear in mind that the calibration process does require time to execute. As a result, the more wavelengths that you ask an attenuator to be calibrated against, the more expensive the unit will become. At the time of preparing this data sheet, calibration fees were set at \$150 USD for each additional wavelength requested.

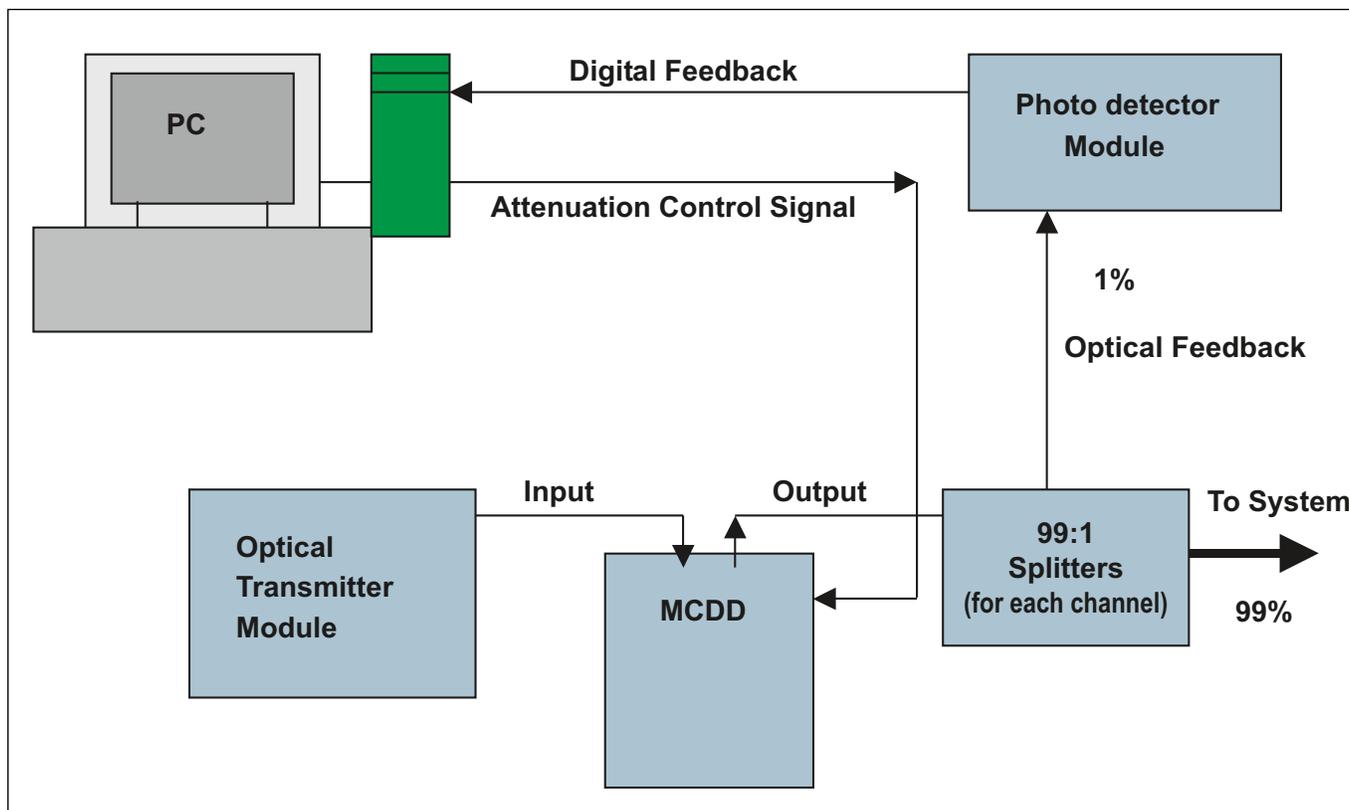


Figure 1.